

# Quick Start Guide

## D-555 ZOOM

# Start Here

It is strongly recommended that you follow these step-by-step instructions to set up and quickly begin using your new Digital Camera.

STEP

 
1

### UNPACK THE BOX CONTENTS

Please gather the items shown in the illustration. You'll need these to complete the procedures that follow.




Digital Camera

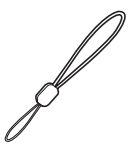


Strap



 
Card

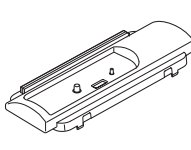

Camera Insert

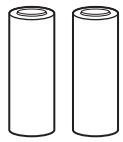 


AA (R6) alkaline batteries (two)

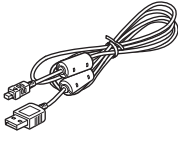 

USB Cable



 CD-ROM (OLYMPUS Master software)

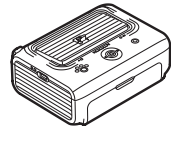

ImageLink Printer

The following items are also included: Basic Manual, Advanced Manual on CD-ROM, Camera Warranty Card, AC Adapter, Power Cord, Paper Tray, 4 x 6 paper, Ink ribbon Cartridge for 4 x 6 printing, Instruction Manual and Printer Warranty card.

STEP

2

### REVIEW THE DOCUMENTATION

**Quick Start Guide** (this document)  
Getting started with your digital camera.

**Quick Reference Guide** (reverse side of this document)  
Quick guide to using common features and functions.

**Basic Manual** (printed booklet)  
Guide to mastering the basics of taking and viewing pictures.

**Advanced Manual** (CD-ROM)  
Detailed instructions on all camera features and functions.

**Software Installation Guide** (Separate document on OLYMPUS Master CD-ROM)  
Detailed instructions on installing the OLYMPUS Master software.

STEP

 
3

### INSERT THE BATTERY

- Make sure the camera is off.
- Open the battery compartment cover.
- Insert the battery as shown.
- Close the battery compartment cover.

① Slide the battery compartment cover outwards.

① Close the battery compartment cover.

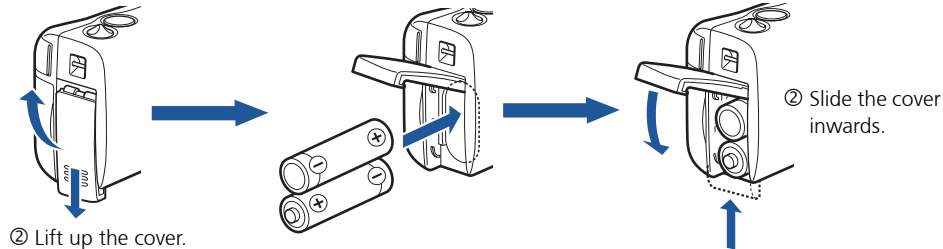


TIPS: The alkaline batteries included are only intended for start up and initial usage. For extended battery life, we recommend using NIMH rechargeable batteries.

STEP

4

### INSERT THE xD-PICTURE CARD

 
- Make sure the camera is off.
- Open the card cover.
- Insert the card as shown.
- Close the card cover.

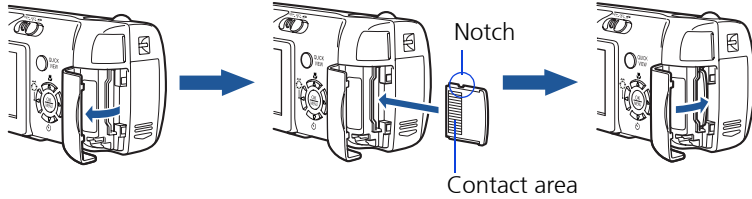

STEP

5

### ATTACH THE STRAP

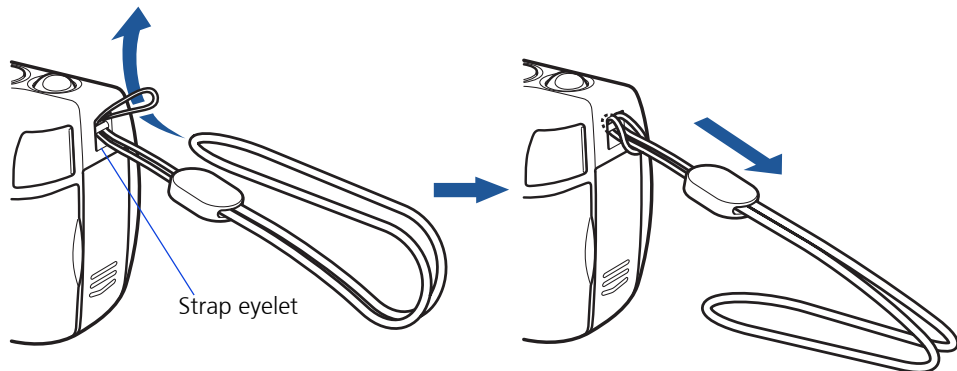 


- Pull the strap tight so that it does not come loose.

STEP


6

### TURN ON THE CAMERA

 Slide the **POWER** switch to , pressing and holding the lock button. The lens extends and the monitor turns on.

POWER switch

Lock button

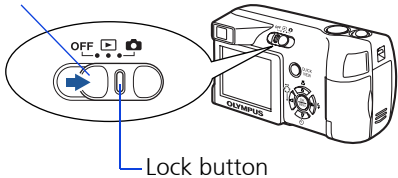
 









Note: To turn the camera off, slide the **POWER** switch to OFF. The lens retracts and the monitor turns off.


STEP

7

### SET THE DATE AND TIME

   - With the camera on, press .
- Use the arrow pad to select [MODE MENU] on the monitor.
- Select [SETUP] tab, and press .
- Select , and press .

 - Select the date format and press .
- Use   to set each item and press  to move to the next field.
- Press  when you finish setting the date and time.

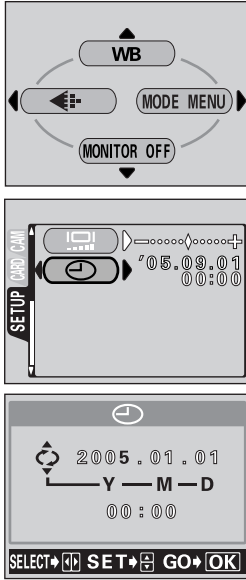

STEP



8

### TAKING A PICTURE

  - Place the AF target mark on your subject using the monitor or viewfinder.
- Press the shutter button halfway to lock the focus and exposure, then press the shutter button completely to take the picture.



AF target mark

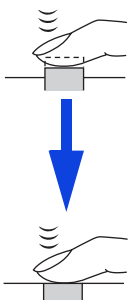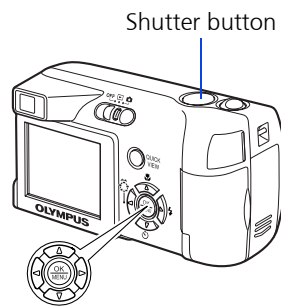


STEP

9

### REVIEWING A PICTURE

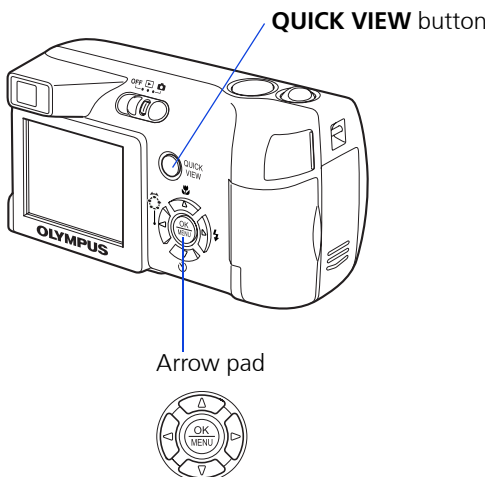 


- Press the **QUICK VIEW** button. The last picture taken is displayed.
- Use the arrow pad to display the picture you want.
- Press the **QUICK VIEW** button again when you are ready to take another picture.




STEP

 10

### ERASING A PICTURE

 
- Select the picture you want to erase and press .
- Press  to select [ERASE].
- Select [YES] and press .

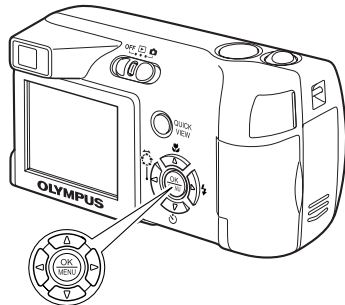



STEP


11

### CONNECTING THE CAMERA TO A COMPUTER

 - Make sure the camera is off.
- Connect the camera to the computer using the USB cable (included).
- Slide the **POWER** switch to .

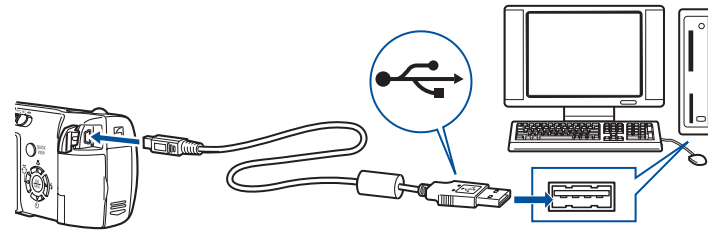

 - Select [PC] on the camera's monitor and press .

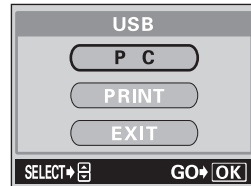

STEP

12

### VERIFY CAMERA CONNECTION

 
#### WINDOWS:

- From the desktop ("Start" menu for XP), open "My Computer."

- Verify that the "Removable Disk" icon representing the camera is displayed.

#### MACINTOSH:

- Verify that the "NO\_NAME" icon representing the camera is displayed.

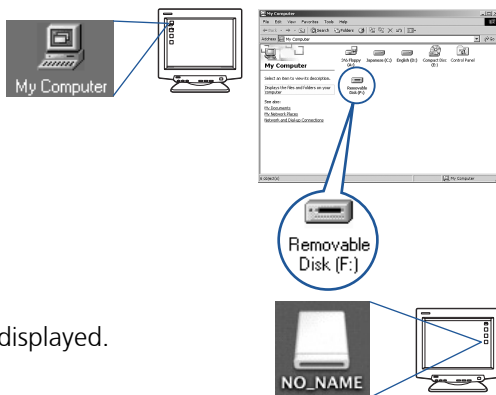


- The above steps confirm that the camera has been installed correctly. You can transfer your images immediately using the standard drag and drop procedure, or manage, edit, print and share your images with the OLYMPUS Master software (included).

STEP

13

### ABOUT THE CD-ROM DISCS

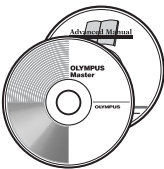 

Now that you've mastered the basic functionality of your new Olympus Digital Camera, you are ready to begin exploring the possibilities that digital photography brings to your computer.

CD-ROM1  
**OLYMPUS Master software:** Download pictures from the camera, view, organize, retouch, e-mail and print your digital photos and movies and more! This CD also contains the complete software users manual in Adobe Acrobat (PDF) format.


CD-ROM2  
**Advanced Manual:** A complete camera guide in Adobe Acrobat (PDF) format. This manual contains detailed instructions on the camera's features and functions which are not covered in the printed Basic Manual or Quick Start/Quick Reference Guides.

STEP

14

### INSTALLING THE CAMERA SOFTWARE

 - Insert the OLYMPUS Master CD-ROM into your computer's CD-ROM drive.
- For Windows: Click the "OLYMPUS Master" button in the "Setup" window.  
For Macintosh: Double-click the "Installer" icon.
- Follow the on-screen instructions. For more details, click "Please Read First".

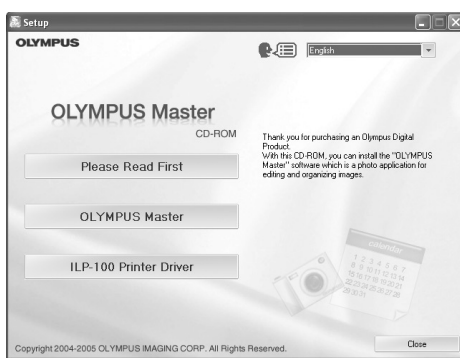

Please refer to the Quick Reference Guide on the reverse side of this sheet to familiarize yourself with the commonly used features and functions of your new Olympus Digital Camera.




# Quick Reference Guide
 
## D-555 ZOOM



INDEX	1. Camera Diagram and Controls
	2. Shooting Modes
	3. Using the Zoom
	4. How to Use the Autofocus
	5. Flash Modes
	6. Image Quality Modes
	7. Recording a Movie
	8. How to Erase All Pictures
	9. E-mailing a Picture
	10. Printing a Picture
	11. ImageLink Printer

## 1 CAMERA DIAGRAM AND CONTROLS

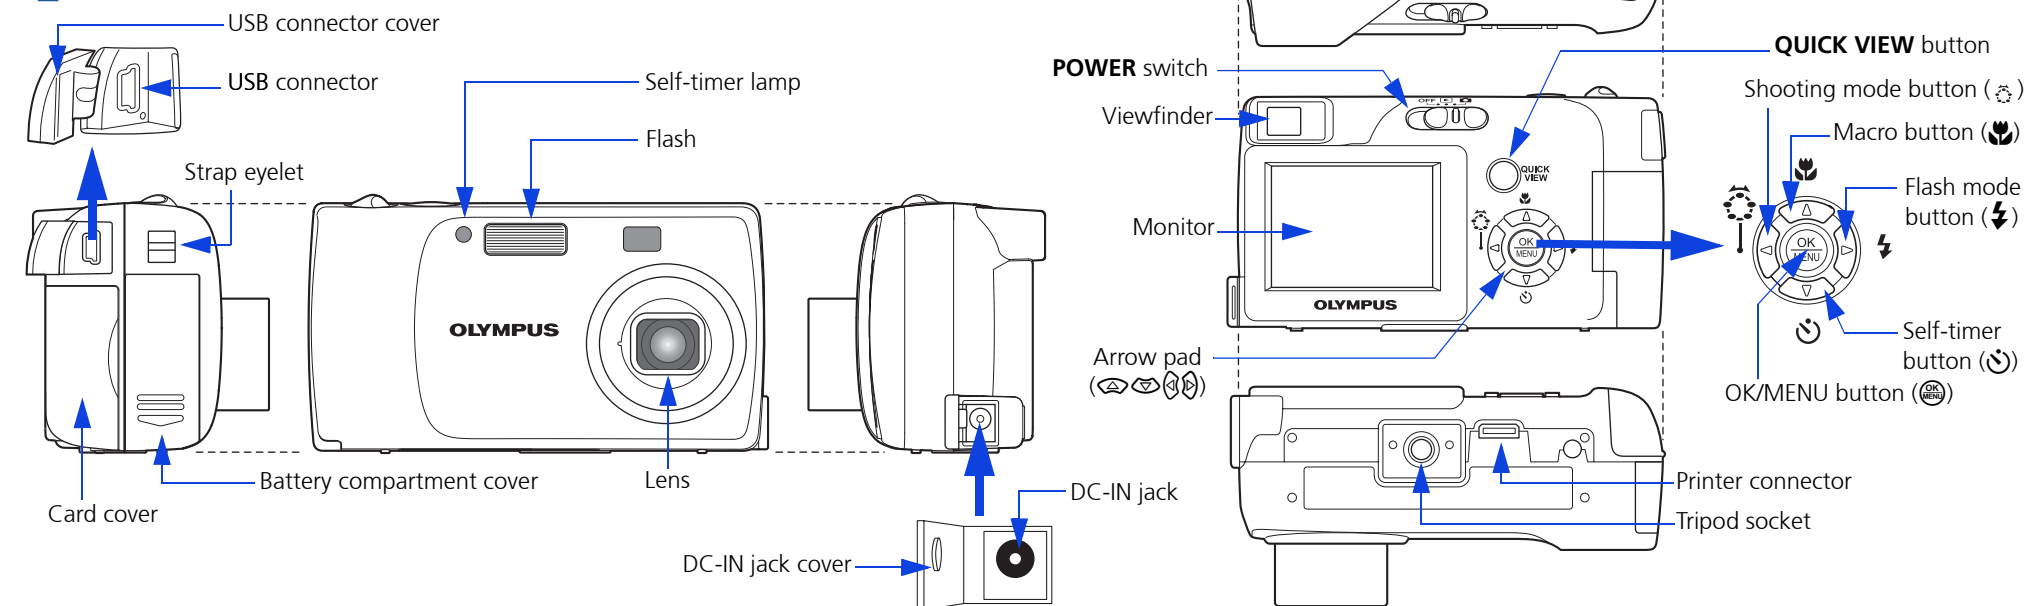

## 2 SHOOTING MODES

  - a. Press ( ).
- b. Press or to select a mode.

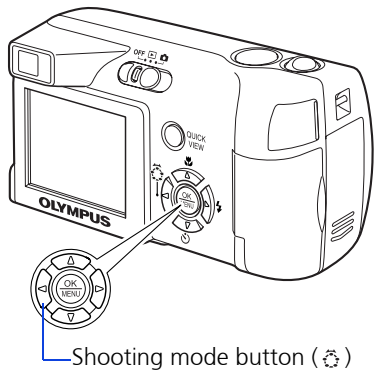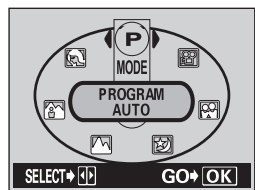


### Shooting Mode Descriptions

- P**
- The generic mode for taking pictures. You can also freely adjust functions such as exposure, etc.
- 
- Lets you take impressive portrait shots.
- 
- Lets you take the subject in the foreground as well as the landscape in the background clearly.
- 
- Lets you capture the vivid blues and greens of all the landscape from nearby to far off in the distance.
- 
- Lets you capture those details that would otherwise be cloaked in darkness when taking pictures at night.
- 
- Lets you take a picture of yourself while holding the camera.
- 
- Lets you record movies.

Note: You can change the mode dial when the camera is on or off.

## 3 USING THE ZOOM

 
This camera features a zoom lens, letting you get closer to the action or capture wide-angle shots.

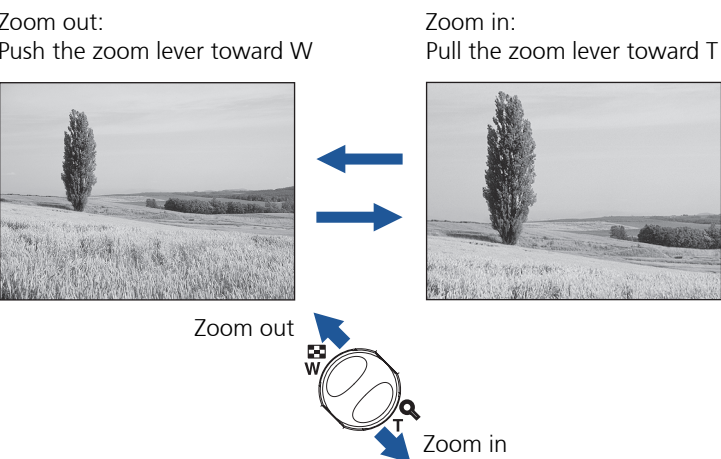

- Push toward W to zoom out and get more into the picture.
- Pull toward T to zoom in and get closer to the action.

## 4 HOW TO USE THE AUTOFOCUS

 - a. While positioning the AF target over the subject, press and hold the shutter button halfway.
- b. The green lamp, which indicates the focus and exposure are locked, remains lit as long as the shutter button is kept depressed halfway.
- c. Press the shutter button completely to take the picture.

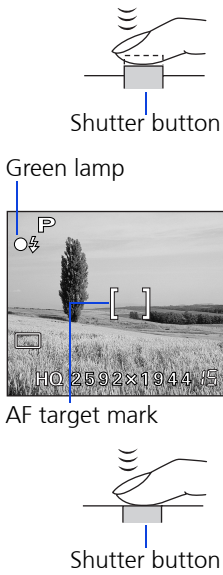

## 5 FLASH MODES

This camera features multiple flash modes. You can select the appropriate flash mode to the suit the situation.

- (None)
- AUTO-FLASH - The camera decides if the flash is needed.
  - RED-EYE REDUCTION - Reduces the incidence of red-eye by emitting pre-flashes to shrink pupil size before taking the picture.
  - FILL-IN FLASH - The flash always fires. Suitable for shooting pictures into strong light.
  - FLASH OFF - The flash is turned off. Suitable for when flash photography is not permitted.
- Press the ( ) button repeatedly to toggle through the flash modes.

 


## 6 IMAGE QUALITY MODES

Your camera is equipped with multiple image quality modes, which determine the quality and image size of the pictures you take. Below is a general description of the commonly used modes. For a detailed description of all quality modes, refer to the Advanced Manual included on the CD-ROM.


Application	Compression		Low compression	High compression
	Image size			
Select according to print size	2592 × 1944		SHQ	HQ
	2592 × 1728			
	1600 × 1200			
For small-sized prints and websites	640 × 480		—	SQ1
			—	SQ2

- a. Press .
- b. Use the arrow pad to select on the monitor.
- c. Select the record mode. Use the arrow pad and to make further settings.

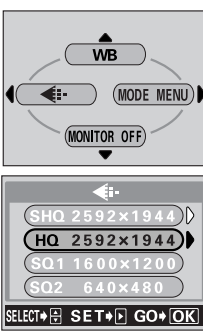

## 7 RECORDING A MOVIE

 
- a. Set the shooting mode to .
- b. Press the shutter button to start recording (video).
- c. Press the shutter button again to stop.

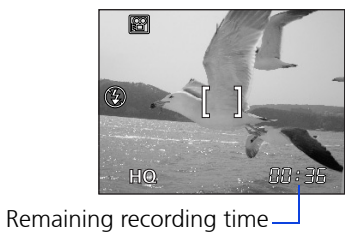

## 8 HOW TO ERASE ALL PICTURES

**WARNING - PERFORMING THESE STEPS WILL DELETE ALL PICTURES!**

 - a. Slide the **POWER** switch to , then press .
- b. Use the arrow pad to select [MODE MENU] on the monitor.
- c. Select the [CARD] tab, and press . Select the [CARD SETUP], and press . Select [ALL ERASE], and press .
- d. Select [YES] and press .

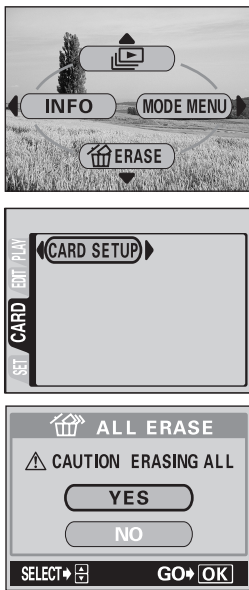

## 9 E-MAILING A PICTURE

Using the OLYMPUS Master software (included), you can share your pictures with others by using the built-in e-mail feature.

After installing OLYMPUS Master, open the program and click "Browse Images". From the "Browse" window, select the picture(s) you want to send and click the "E-mail" tool button.

At this time, you can resize your pictures to make them more manageable for e-mail. This helps you stay within the e-mail capacity limitations set by your or the recipient's e-mail provider.

When finished, click the "Launch Mailer" button at the bottom of the window. Your default e-mail program will open, and the selected picture(s) will automatically be attached to a new message.

## 10 PRINTING A PICTURE

Using the OLYMPUS Master software (included), you can make prints of your pictures using your own photo printer.

After installing OLYMPUS Master, open the program and click the "Print Images" icon on the main menu. You can create many different types of prints such as an index print, photos, albums, or calendars. Simply select the image(s) and add them to one of the many layouts within OLYMPUS Master. For detailed instructions, please refer to the "Help" menu in the software. You can also order prints online using the "Print Online" feature in OLYMPUS Master.

Alternatively, you can print your pictures by connecting your PictBridge\*-compatible camera directly to a PictBridge\*-compatible printer, such as the Olympus P-10 Digital Photo Printer. This permits fast, easy printing without using a computer.

\* For detailed instructions on using PictBridge, please refer to your camera's Advanced Manual included in digital format on the CD-ROM.

## 11 INCLUDED PRINTER

By docking the camera with the included printer, you can print pictures directly without having to use a personal computer. In addition, you can also print pictures by connecting the printer to a PictBridge compatible camera or a personal computer.

### Direct Printing from Digital Camera

 
Connect the camera in the same pack directly to the printer and print pictures from camera by instructed operation procedure. Cable connection is unnecessary.

### Printing from PictBridge-compatible digital camera

The common standard for the camera and the printer is supported by the software "PictBridge". The camera and the printer both compatible with PictBridge are connected by USB cable to print pictures from camera.

### Printing from PC

The printer and the PC are connected by USB cable to print pictures from PC.

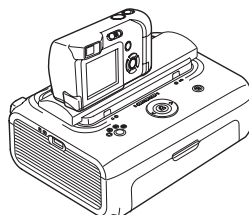

## CONTACT INFORMATION

### OLYMPUS IMAGING AMERICA INC.

Two Corporate Center Drive, PO Box 9058, Melville, NY 11747-9058

### Technical Support (USA):

24/7 online automated help: <http://olympusamerica.com/support>  
Phone customer support: 1-888-553-4448 (toll free)

Our phone customer support is available from 8am - 10pm, (Monday to Friday) ET

E-mail: [distec@olympus.com](mailto:distec@olympus.com)  
Olympus software updates can be obtained at: <http://olympus.com/digital>

**OLYMPUS**